

50mm Aluminium Bar Buckle



Aluminium Bar Buckle
Breaking Load: 2,640 lb



Usage



1. Thread the loose end of the webbing through the rear slot of the bar buckle and pull the excess webbing through.
2. Pass the loose end back through the buckle, between the knurled centre bar and the opposite outer bar.
3. Pull the loose end through to tighten the strap.
4. Secure the loose end using the supplied sliplock slide, as illustrated below.

Sliplock Slide

The loose ends of webbing are often passed back through the sliplock slides to prevent loosening.

- Take the loose end of the strap and bend it back upon itself towards the slide.
- Feed the strap over the first bar of the slide.
- Then Feed it under the next bar.
- Finally, pull the strap tight to lock in place.



Crelling Harnesses For Disabled Ltd.

12 Crescent East, Thornton-Cleveleys, Lancashire, FY5 3LJ
Tel: 01253 852298, Email: info@crelling.com Website: www.crelling.com